



AUTOMARSHAL

Automatic number plate
recognition

Mallenom Systems LLC

📍 21B Metallurgov St., Cherepovets 162610, Russia
📞 +7 (8202) 20-21-17 / +7 (8202) 20-16-35
✉ info@mallenom.ru

Activating Automarshall software key


Internet connection is required to activate Automarshall software key.




Note: The license number and serial number are provided as an example.

Activation steps:


1. Install the Automarshall software.
2. Copy license file: 8000B6EA.lic to the same installation directory as Automarshall. Default directory is C:\Program Files\Automarshall 2.
3. Run the activation utility GuardantActivationWizard.exe (attached to the archive file "Software key activation").
4. Specify location of the 8000B6E8.grdvd file in the opened window and press "Next".

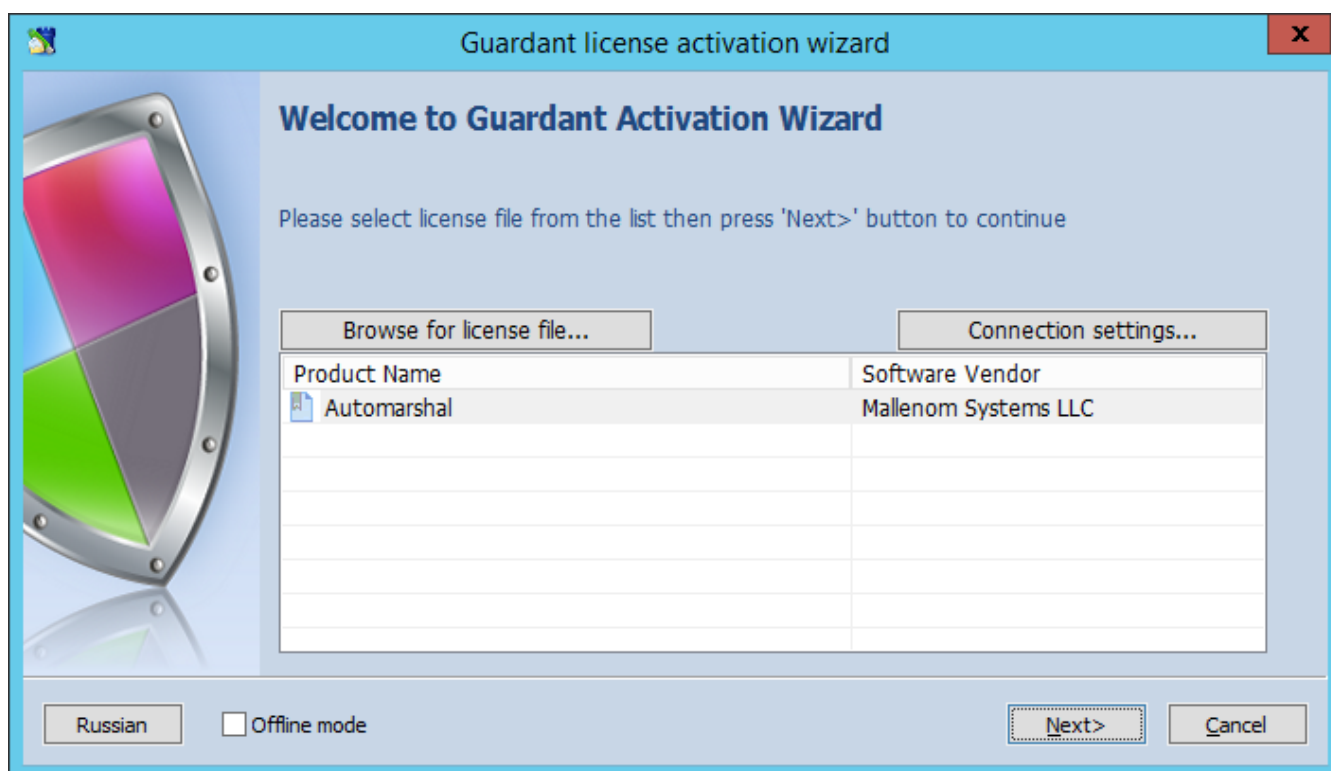

5. Enter serial number: S/N: s23kUO-rgLJ06-OLOion-fGrbee-9aZwRC-6Zxa6p-caU1fU-zx6muQ-sINGP#-q2AIBC and press "Next".

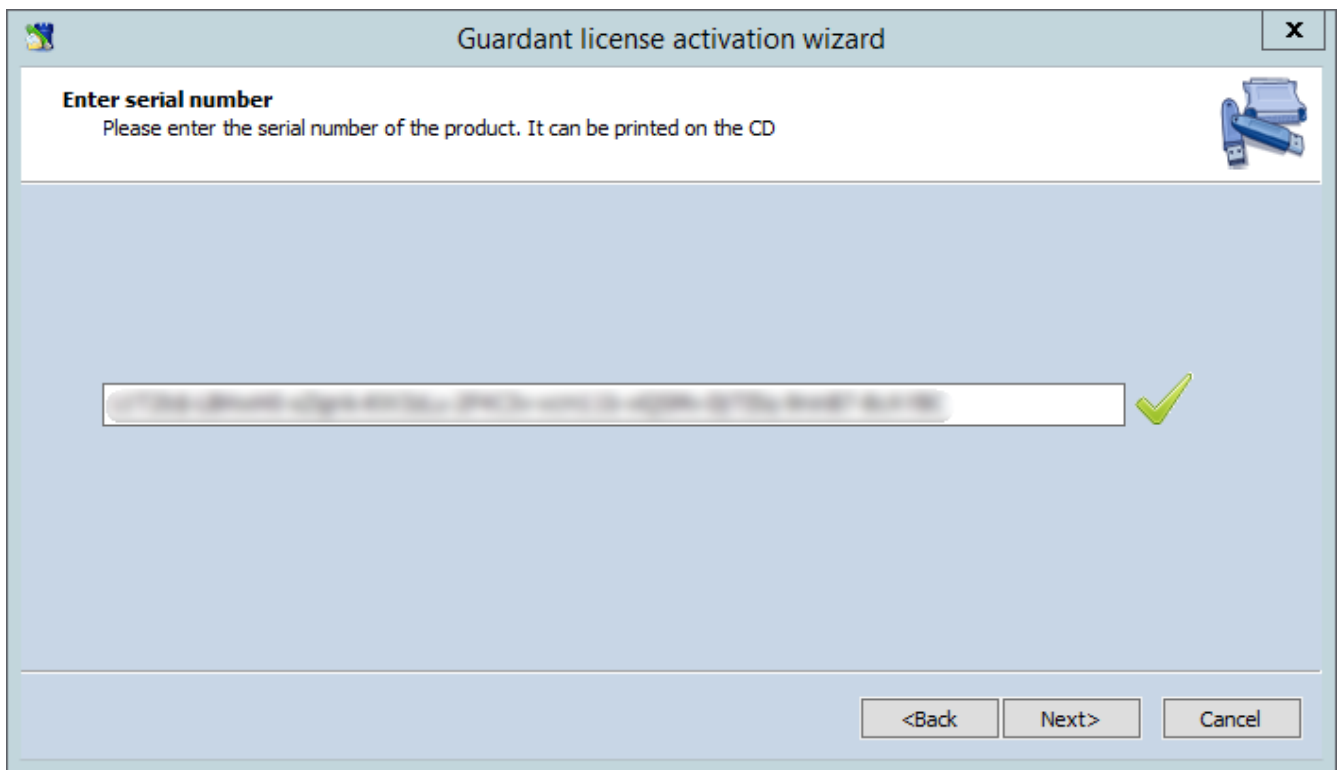


6. If the license has been successfully activated, a message will be displayed on the screen.

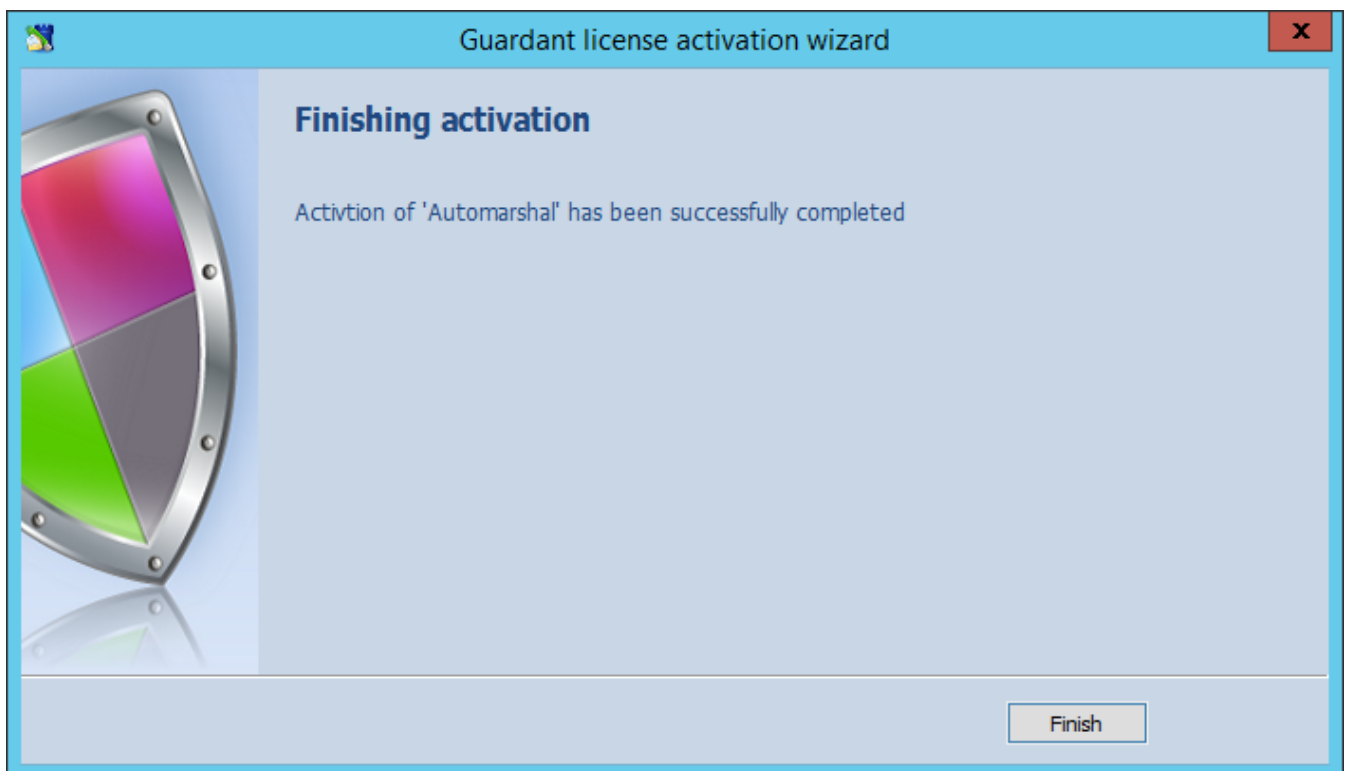


To close the utility, click "Finish".

- Verify key activation. To do this, open Control Panel/Guardant Drives/Diagnostics. In the opened window, press “Diagnostics” button.

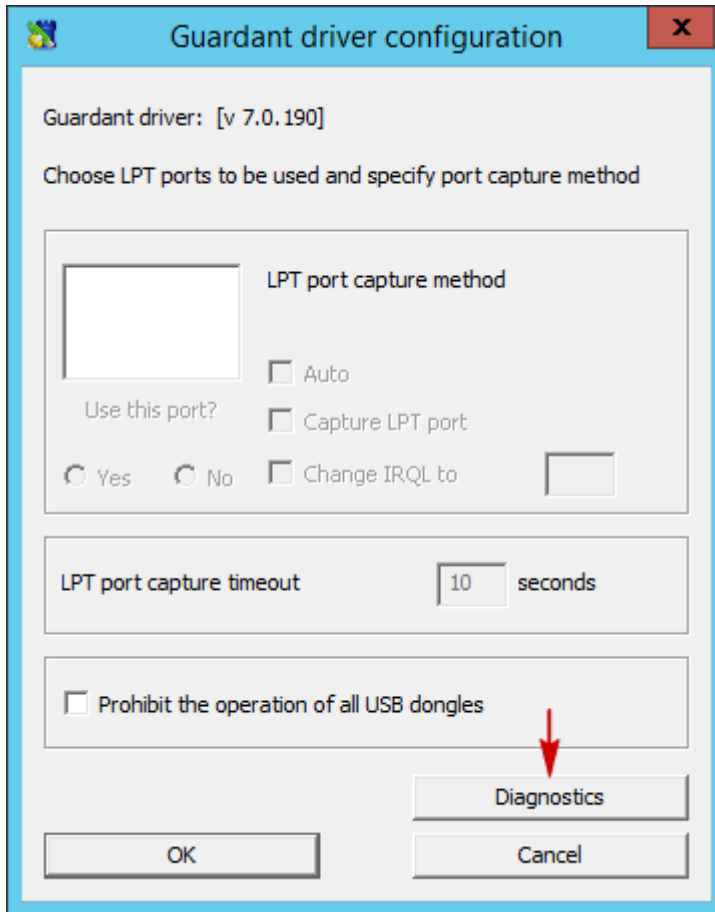

In the Guardant Diagnostic Utility, press “Enforced Search” button. Your software key should appear in the list.

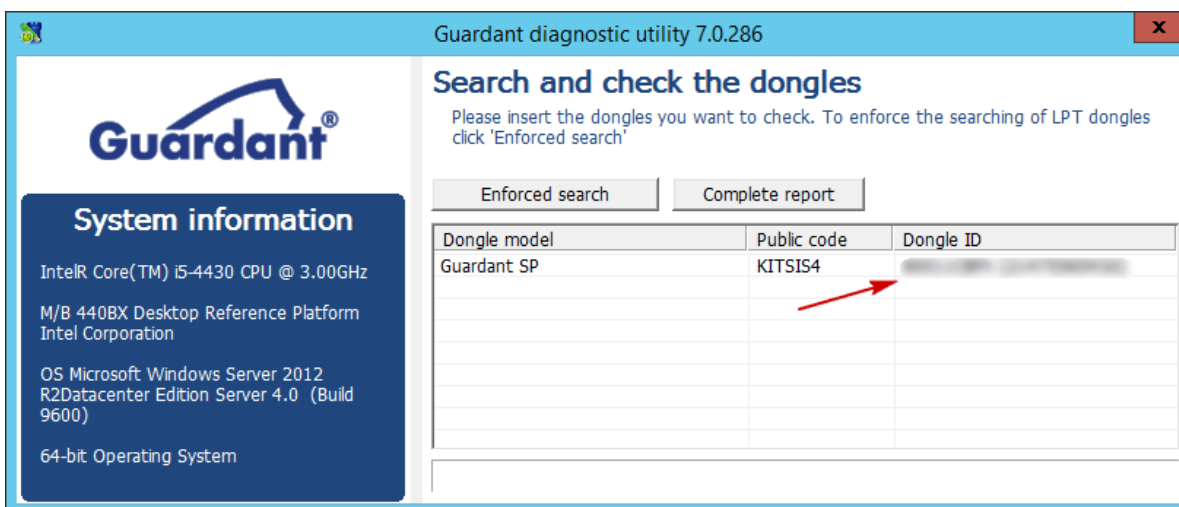

- Run the Automarshall software.